

Delta Optical Titanium HD 4-24x50 - interchangeable turrets manual

STEP 1: Remove both elevation and windage turret caps.



STEP 2: Unscrew the bolts holding the turret scales with Allen key.



STEP 3: Put on the covering rings to hide the thread at the base of the turrets.



STEP 4: With regards to the elevation turret you can choose one of two features:

OPTION 1: Leave the mounted ZeroLock ring on.



OPTION 2: Replace the ZeroLock ring with the provided index line ring showing the vertical position of the elevation turret.



STEP 5: Put on both elevation and windage scales and secure them with the long bolts.



THE BALLISTICS TURRETS ARE READY TO USE.

